

Ultrathin RGB/RGBW Touch Wheel RF Remote Controller

Model No: PL - R8 - B



RGB or RGBW/Touch colour wheel/Wireless remote 30m distance/CR2032 battery

Features

- Apply to RGB or RGBW LED controller.
- Ultra sensitive colour adjustment touch wheel.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- White & Black available.




PL - R8 - B
RGB/RGBW

Technical Parameters

UK CE RoHS emc LVD RED

Input and Output		Safety and EMC		Environment	
Output signal	RF(2.4GHz)	EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3	Operation temperature	Ta: -30 °C ~ +55 °C
Working voltage	3VDC(CR2032)		ETSI EN 301 489-17 V3.2.4	Package	
Working current	<5mA	Safety standard(LVD)	EN 62368-1:2020+A11:2020	Size	L114 x W65 x H20mm
Standby current	<10μA	Radio Equipment(RED)	ETSI EN 300 328 V2.2.2	Gross weight	0.062kg
Standby time	1 year	Certification	CE,EMC,IVD,RED	Warranty	
Remote distance	30m(Barrier-free space)			Warranty	5 years


Mechanical Structures and Installations

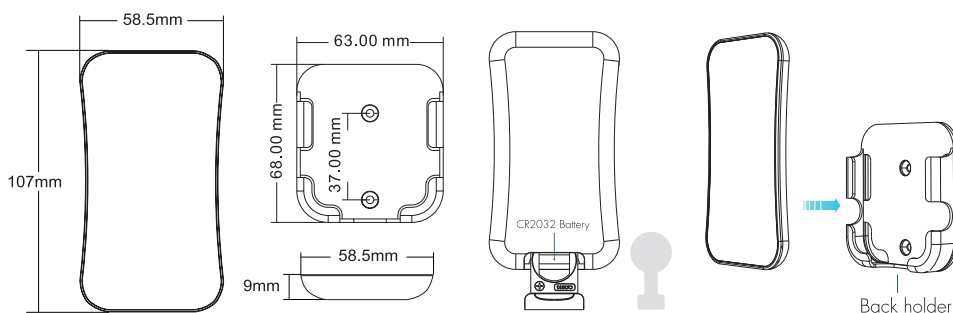

To fix the remote, two options are offered for selection:

- Option 1:
fix the remote' back holder on the wall with two screws.
- Option 2:
adhere the remote' back holder to the wall with paster.

Note: 1. Before the first use, please remove the protective film on the battery.
2. If the LED indicator is not on when press key, it is due to dead battery or bad contact caused by multiple plugging, please replace the battery, or raise the battery shrapnel with a screwdriver.



Operation

- When light is on, touch the colour wheel, the indicator will display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) of the remote.
The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match,
The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power, then switch on power, repeat again.
Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote.
The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power, repeat again.
Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote.
The light blinks 5 times means all matched remotes were deleted.


Ultrathin RGB/RGBW Touch Wheel RF Remote Controller

Model No: PL - R8 - B



Key function

- PL - R8-B RGB/RGBW remote

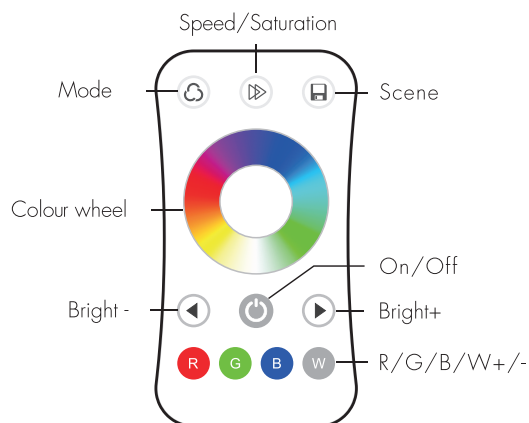

On/Off: Turn on/off light.

Colour wheel: Touch to change static RGB colour.

Mode: Short press run the next dynamic mode, long press 2s run mode cycle.

Speed/Saturation: For dynamic mode, adjust speed, short press 10 levels, long press 2s get the default speed. For static colour, adjust saturation, namely change current static RGB color to mixed white slowly, short press 11 levels, long press 1-6s for continuous 256 levels adjustment.

Bright+/-: Adjust brightness, short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

R/G/B: Short press get red, green or blue colour directly, long press 1-6s adjust R/G/B brightness continuously to achieve millions of colours.

W+/-: For RGB light, short press turn on/off white(RGB mix), long press 1-6s adjust saturation continuously, namely change current static RGB color to mixed white slowly.

For RGBW light, short press turn on/off W channel, long press 1-6s adjust W brightness continuously.

Scene: Short press recall the scene, long press 2s save the current colour into the scene. the LED indicator will light up longer when save OK.

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.